

GENERAL INFORMATION (Contd)

Serial Numbers - Chassis: (Contd)

(Trucks, Models 2WD, 4WD)

Chassis serial number is shown on plate located on left front side of dash panel near steering column. Numbers start at 10,001.

Chassis Serial Numbers by Year

<u>Year</u>	<u>Model</u>	<u>Serial No. Beginning</u>	<u>Serial No. Ending</u>
1945	CJ-2A	10001	11824
1946	CJ-2A	11825	83379
	4-63	10001	16534
1947	CJ-2A	83380	148459
	4-63	16535	44050
	2WD Truck	10001	12642
	4WD Truck	10001	12346
1948	CJ-2A	148459	222581
	4-63 SW, P.Del.	44051	84825
	6-63 SS	10052	14569
	6-63 SW	10001	13607
	2WD	12643	21859
	4WD	12347	33304
1949	CJ-2A	222582	224764
	CJ-3A	10001	37749
	4-63 SW, P.Del.	84826	107895
	4x4-63 SW	10001	14472
	6-63 SS	14570	16855
	6-63 SW	13608	23614
	* VI-2	65199	- - - -
	VI-3	10001	12698
	VI3-6	10001	10654
	2WD	21860	26815
	4WD	33305	44062

* VI-2 serial numbers run consecutively with 4-63 SW and P. Del.

Serial Numbers - Engine:

Engine serial number is stamped on the top water pump boss at upper front end of cylinder block, or on a boss on the right side of cylinder block above generator. Numbers start at 10,001.

Engines equipped with .010 undersize main and connecting rod bearings can be identified by the letter "A" following the serial number. Example: 10,001-A. Engines having cylinder blocks with .002 oversize bores can be identified by the letter "B" following the serial number. Example: 10,001-B.